

NEC SL2100 Instructions

Voicemail

Transfer a caller to someone's voicemail

Answer call – Transfer – DSS button – dial 8 – hangup.

Voicemail

- A red light will flash when have a new message. Press the VMsg softkey and follow the prompts.
- Press the VMsg softkey under the display.
- Follow the prompts to record your greeting and set a password.
- **Set a password** on your voice mailbox. It can be accessed from outside by you, or anyone.
- While listening to your messages:
 - Press 2 Go back a few seconds
 - Press 4 Forward a few seconds
 - Press 3 Delete current message
 - Press 22 To go back to beginning
 - Press 5 Next message

Voicemail Password

- With the phone hung up - Press the VMsg softkey – More – Setup – Code.
- Enter a 4 digit number for your password – Press 6.
- Don't use 1234. It will be hacked.

Check your voicemail from outside the office:

During Office Hours:

- Call the office and ask to be transferred to your voicemail.
- When you hear your greeting message, press #.
- Enter your security code (voicemail password) if prompted.
- Follow the prompts to listen to your messages.

After Hours:

- Call the office. When you hear the auto-attendant choices, press #.
- Enter your security code (voicemail password) if prompted.
- Follow the prompts to listen to your messages.

